Smart 4 mini
Quick start guide

Some services and apps may not be available in all countries. Please ask in-store for details.

Android is a trademark of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution Licence.

© Vodafone Group 2014. Vodafone and the Vodafone logos are trade marks of Vodafone Group. Any product or company names mentioned herein may be the trade marks of their respective owners.

English - CJB27B5VDAAA

IP4776_VF785_QG_Eng_GB_23_131230.indd 1-2 2013-12-31 13:08:09

For more information about how to use this phone, please visit the website: vodafone.com/smart4mini to download the full user manual. Here, you can also view the FAQs, check for software updates, and more.

1 Your phone

1.1 Keys and connectors



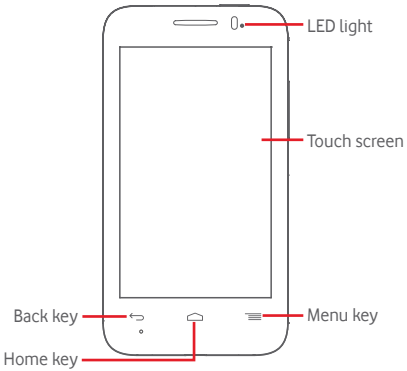

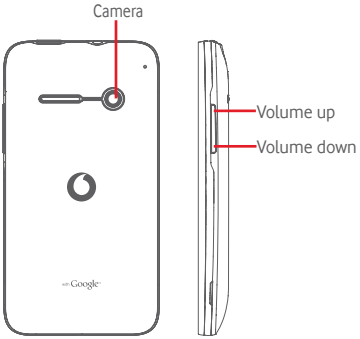

Menu key

- Touch: display menu options. On the Home screen, touch to access **Wallpaper**, **Manage apps** and **Settings**.
- Touch & hold: this shows you images of your most recently-used apps. Touch an image to open the associated app, or swipe it up or down to remove it from the list. Touch **Clear All** to clear all the apps and go back to the Home screen directly. Touching **Memory Manager** will go to the memory manager main screen.

Home key

- While on any app or screen, touch the **Home** key to return to the main Home screen.
- Touch & hold this key to access **Google Now** & **Voice Search**.

Back key

- Touch to go back to the previous screen, or to close a dialogue box, options menu, the Notification panel, etc.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:1-Sec1:2 2013-12-31 13:08:42

Power key

- Press: activate the lock screen/wake up the screen.
- Press and hold: show the pop-up menu to select from **Power off**, **Restart**, **Airplane mode**, **Quick start**, and icons for ringing modes.
  Press and hold: power on.
- Press and hold the **Power** key and the **Volume down** key to capture a screenshot.

Volume keys

- During a call, they adjust the earpiece or headset volume.
- In Music/Video/Streaming mode, they adjust the media volume.
- In general mode, they adjust the ringtone volume.
- Mute the ringtone of an incoming call.
- On the lock screen, press and hold either volume key to open the Camera.
- In Camera mode, pressing either volume key captures a photo.

1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover

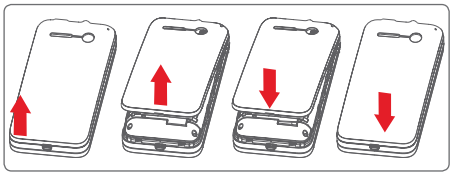

Inserting or removing the SIM card

You must insert your SIM card to make phone calls. Please power off your phone before inserting or removing the SIM card.

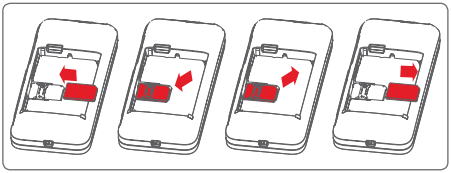

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the SIM card, press and slide it out.

Your phone only supports mini-SIM cards. Do not attempt to insert other SIM card types, like micro-SIMs or nano-SIMs, otherwise this may cause damage to your phone.

Installing or removing the battery

Please power off your phone before removing the battery.

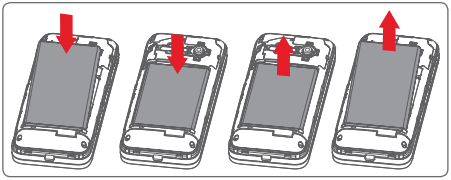

- Insert the battery and click it into place, then close the cover.
- Unclip the cover, then remove the battery.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:3-Sec1:4 2013-12-31 13:08:43

Installing the microSD card

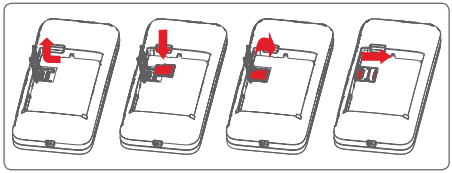

First remove the battery. Slide the microSD holder to the left to unlock it, then lift it up. Place the microSD card in the space provided, with the gold contacts facing down. Then fold the microSD holder down again and slide it to the right until it locks.

Charging the battery

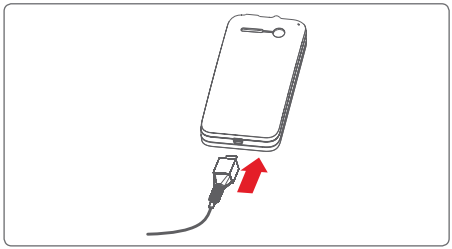

To charge the battery, connect the charger to your phone and mains socket. You can also charge your phone via a USB cable.

To reduce energy wastage, disconnect your charger from the plug when the battery is fully charged.

To reduce your phone's power consumption, switch off Wi-Fi, GPS, Bluetooth or apps running in the background when not needed. In Settings you can also lower the brightness of the screen, and shorten the length of time before the screen goes to sleep.

1.2.2 Power on your phone

Hold down the **Power** key until the phone powers on. It will take a few seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone you will be asked to set the following options: language, mobile data, Google account, date & time, etc.

If you power on your phone with no SIM card inserted you will still be able to connect to a Wi-Fi network to sign into your Google account and to use some features.

1.2.3 Power off your phone

Hold down the **Power** key from the Home screen until the Phone options appear, then select **Power off**.

1.3 Home screen

You can bring all your favourite items (apps, shortcuts, folders and widgets) to your Home screen for quick access. Touch the **Home** key to switch to the Home screen.

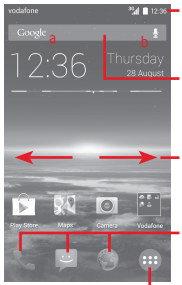

Status bar
- Status/Notification indicators
- Touch and drag down to open the Notification panel

Google Search bar
- Touch a to enter text search screen
- Touch b to enter voice search screen

Slide left or right to view other panels on the Home screen

Favourite tray apps
- Touch to enter the app
- Touch and hold to move or change apps

Application tab
- Touch to open All apps

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:5-Sec1:6 2013-12-31 13:08:43

The Home screen extends on either side of the screen to allow more space for adding apps, shortcuts, etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. The white spot in the lower part of the screen indicates which screen you are viewing.

1.3.1 Using the touchscreen

Touch

To access an app, touch it with your finger.

Touch and hold

Touch and hold the Home screen to access the available options for setting the wallpaper.

Drag

Touch and hold an item to be able to drag it to another location.

Slide/Swipe

Slide the screen to scroll up and down lists, screens of apps, images, web pages, etc.

Flick

Similar to swiping, but flicking makes it move quicker.

Pinch/Spread

Place your fingers of one hand on the screen surface and draw them apart or together to scale an element on the screen.

Rotate

Automatically change the screen orientation from portrait to landscape by turning the phone sideways.

1.3.2 Status bar

From status bar, you can view both phone status (on the right side) and notification information (on the left side).

Status icons

G	GPRS connected		GPS is on
G	GPRS in use	R	Roaming
E	EDGE connected		No SIM card inserted
E	EDGE in use		Vibrate mode
3G	3G connected		Ringer is silenced
3G	3G in use		Phone microphone is mute
H	HSPA (3G+) connected		Battery is very low
H	HSPA (3G+) in use		Battery is low
H+	HSPAP (3G+) connected		Battery is partially drained
H+	HSPAP (3G+) in use		Battery is full
	Connected to a Wi-Fi network		Battery is charging
	Bluetooth is on		Headset connected
	Connected to a Bluetooth device		No signal
	Airplane mode		Signal strength
	Alarm is set		

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:7-Sec1:8 2013-12-31 13:08:43

Notification icons

	New Gmail™ message		Call in progress
	New text or multimedia message		Missed call
	Problem with SMS or MMS delivery		Call on hold
	New Hangouts message		Call forwarding is on
	New voicemail		Uploading data
	Upcoming event		Downloading data
	Data is synchronising		Download finished
	No microSD card installed		An open Wi-Fi network is available
	Song is playing		Phone is connected via USB cable
	Screenshot error		Radio is on
	USB tethering is on		System update available
	Portable Wi-Fi hotspot is on		Connected to VPN
	Screenshot captured		International Roaming is enabled
	Carrier data use threshold approaching or exceeded		International Roaming is disabled

Notification panel

Touch and drag down the Status bar to open the Notification panel. Touch and drag up to close it. From the Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.

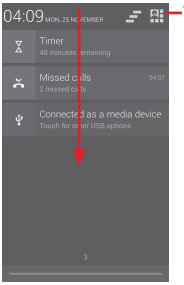

Touch to access **Quick setting bar**

Touch a notification and slide it sideways to delete it.

Touch the icon to clear all event–based notifications (other ongoing notifications will remain).

Touch and then the Settings icon to access **Settings**.

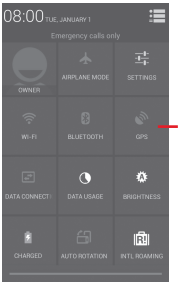

Quick setting bar
- Touch icons to enable/disable functions or to change modes
- Touch & hold to show the settings

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:9-Sec1:10 2013-12-31 13:08:43

1.3.3 Personalise your Home screen

Add an app or widget

Touch the Application tab , then touch and hold the app or widget to activate the Move mode, and drag the item to any Home screen.

Reposition an app or widget

Touch and hold the item to be repositioned to activate the Move mode, drag the item to the desired position and then release. You can move items both on the Home screen and the Favourite tray. Hold the icon on the left or right edge of the screen to drag the item to another Home screen.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item up to the top of the **Remove** icon, and release after the item turns red.

Create folders

To make it easier to organise apps and shortcuts on the Home screen and the Favourite tray, you can add them to a folder by stacking one item on top of another. To rename a folder, open it and touch the folder's title bar to input the new name.

Wallpaper customisation

Touch and hold an empty area on the Home screen or go to **Settings > Display > Wallpaper** to customise your wallpaper.

1.3.4 Application tab

Touch from the Home screen to show a list of all your apps.

To return to the Home screen, touch the **Home** key.

View Default/Most used/Recently installed apps

To view your Default/Most used/Recently installed apps, touch key in apps list screen and choose your option.

1.3.5 Volume adjustment

You can set the ringer, media and phone ringtone volume by pressing the **Volume up/down** key or go to **Settings > Sound**.

1.4 Apps and widgets list

The list contains all pre-installed and newly installed apps and widgets.

To open the list, touch from the Home screen. To return to the Home screen, touch the **Home** key or the **Back** key.

Touch the icon to access the Play Store.

2 Text input

2.1 Using the onscreen keyboard

Onscreen keyboard settings

Touch the Application tab from the Home screen, select **Settings > Language & input**, then touch the Settings icon on the right of **Google keyboard**.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:11-Sec1:12 2013-12-31 13:08:43

Adjust the onscreen keyboard orientation

Turn the phone sideways or upright to adjust the Onscreen Keyboard orientation. You can also adjust it by changing the settings (go to **Settings > Display > Auto rotate screen**).

2.1.1 Google keyboard

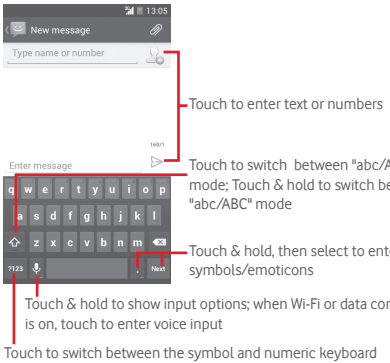
13:05
New message
Type name or number
Enter message
Touch to enter text or numbers
Touch to switch between "abc/Abc" mode; Touch & hold to switch between "abc/ABC" mode
Touch & hold, then select to enter symbols/emoticons
Touch & hold to show input options; when Wi-Fi or data connection is on, touch to enter voice input
Touch to switch between the symbol and numeric keyboard

2.2 Text editing

You can edit the text you have entered.

- Touch and hold or double-tap on the text you would like to edit.
- Drag the end points to change the highlighted selection.
- The following options will show: **Select all**, **Cut**, **Copy** and **Paste**.
- Touch the icon to confirm.

3 Phone call

3.1 Placing a call

You can easily make a call using **Phone.** Touch the Application tab from the Home screen and select **Phone**.

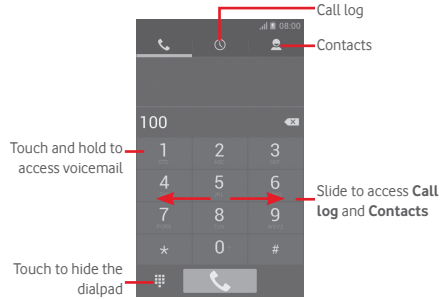

Enter the number you want from the dialpad directly or select a contact from **Contacts** or **Call log** by sliding or touching tabs, then touch to place the call.

The number you entered can be saved to **Contacts** by touching key and selecting **Add to Contacts**.

If you make a mistake, you can delete the incorrect digits by touching .

To hang up a call, touch .

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:13-Sec1:14 2013-12-31 13:08:43

3.2 Answering or rejecting a call

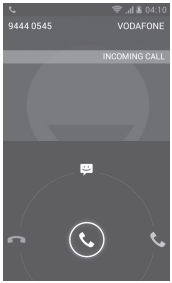

When you receive a call, touch .

- Slide the icon right to answer the call;
- Slide the icon left to reject the call;
- Slide the icon up to reject the call by sending a preset message.

To mute incoming calls, press the **Volume up/down** key or turn the phone face down if **Turn over to mute** is active (to turn this on, go to **Settings > Gestures > Turn over to mute**).

3.3 View your call history

You can view your call history by touching from the Dial screen to view call history in categories of Incoming calls, Outgoing calls, and Missed calls.

3.4 Speed dial settings

You can access this screen by touching key and then **Speed Dial** on Dial screen, then select contacts to define 2-9 screen keys as a speed dialer. Touch to remove contacts from speed dial.

4 People

You can view and create contacts on your phone and synchronise these with your Gmail contacts or other apps on the web or on your phone.

When using People for the first time you are asked to add new contacts, import contacts from your SIM card or synchronise contacts from other app accounts to your phone.

4.1 Adding a contact

Touch the Application tab on the Home screen, select the **People**, then touch the icon in the contact list to create a new contact.

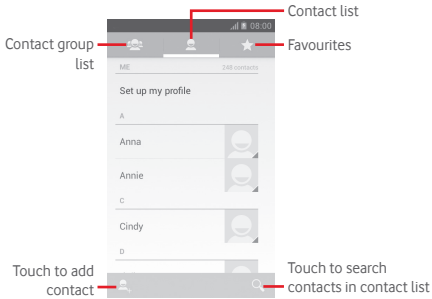

4.2 Importing, exporting and sharing contacts

From the Contacts screen, touch key to open the options menu, touch **Import/Export**, then select to import/export contacts from/to your SIM card, Phone, microSD card, Phone storage, Accounts, etc.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:15-Sec1:16 2013-12-31 13:08:44

To import/export a single contact from/to your SIM card, choose an account and target SIM card(s), select the contact you want to import/export, and touch ✓ to confirm.

To import/export all contacts from/to your SIM card, choose an account and target SIM card(s), touch **Select all** and touch ✓ to confirm.

You can share a single contact or contacts with others by sending the contact's vCard to them via Bluetooth, Gmail, etc. To do this, touch a contact you want to share, touch ☰ key and **Share** from contact details screen, then select the app to perform this action.

4.3 Synchronising contacts in multiple accounts

Contacts, data or other information can be synchronised from multiple accounts, depending on the apps installed on your phone.

5 Messaging

Your phone can create, edit and receive SMS and MMS messages.

Touch the Application tab from the Home screen, then select **Messaging**.

All messages you receive or send out can be saved in your phone memory or SIM card. To view SMS messages stored on your SIM card, touch ☰ key from Messaging screen, then touch **Settings > Text messages (SMS) > Manage SIM messages**.

5.1 Write message

On the message list screen, touch the new message icon ✎+ to write new text/multimedia messages.

- Touch to view the whole message thread
- Touch & hold message threads to delete messages or to add shortcut

Sending a text message

Enter the mobile phone number of the recipient on the **Type name or number** bar or touch 👤 to add recipients, then touch the **Enter message** bar to enter the text of the message. When you've finished, touch ▷ to send the text message.

An SMS of more than 160 characters will be charged as several SMS. Specific letters (like accents, for example) will also increase the size of the SMS, so this may cause multiple SMS to be sent to your recipient.

Sending a multimedia message

MMS enables you to send video clips, images, photos, animations, slides and audio to other compatible phones and e-mail addresses.

An SMS will be converted to MMS automatically when media files (image, video, audio, slides, etc.) are attached or Subject or email addresses are added.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:17-Sec1:18 2013-12-31 13:08:44

6 Email

Besides your Gmail account, you can also set-up external email accounts on your phone.

Touch the Application tab from the Home screen, then select **Email**.

An email wizard will guide you through the steps to set up an email account.

1 Enter the email address and password of the account you want to set up.

2 Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.

3 Enter the account name and display name in outgoing emails.

4 To add another email account, you can touch key and **Settings**. Touch **ADD ACCOUNT** on the right of the title to create a new account.

To create and send emails

1 Touch the icon on Inbox screen.

2 Enter recipient(s) email address(es) in the **To** field.

3 If necessary, touch key and touch **Add Cc/Bcc** to add a copy or a blind copy to other recipients.

4 Enter the subject and the content of the message.

5 Touch key, then touch **Attach file** to add an attachment.

6 Finally, touch to send.

7 If you do not want to send the mail right away, you can touch key and **Save draft** or touch the **Back** key to save a copy.

7 Getting connected

Your phone can connect to the Internet using either GPRS/EDGE/3G or Wi-Fi.

7.1 Connecting to the Internet

7.1.1 GPRS/EDGE/3G

The first time you turn on your phone with the SIM card inserted, it will automatically configure a mobile network service: GPRS, EDGE or 3G. If the network is not connected, you can touch on the Quick setting bar.

To check the network connection you are using, touch the Application tab on the Home screen, then touch **Settings > More... > Mobile networks > Access Point Names** or **Network operators**.

7.1.2 Wi-Fi

You can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on the phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

1 Touch on Quick setting bar to go to **Settings**.

2 Touch the switch OFF beside Wi-Fi to turn on/off Wi-Fi.

3 Touch **Wi-Fi**: detailed information of all detected Wi-Fi networks is displayed in the Wi-Fi networks section.

4 Touch a Wi-Fi network to connect to it. If the network you selected is secured, you are required to enter a password or other credentials (contact network operator for details). When you're finished, touch **Connect**.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:19-Sec1:20 2013-12-31 13:08:44

7.2 Browser

Using the Browser you can enjoy surfing the Web.

To get onto the Web, touch the Application tab from the Home screen, then touch **Browser**.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch Go to confirm.

7.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone and computer.

To connect/disconnect your phone to/from the computer:

Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.

If you want to change the USB connection type, open the Notifications panel and touch .

To locate data you have transferred or downloaded in the internal storage:

1 Touch the Application tab from the Home screen to open the apps list.

2 Touch **File Manager**.

All data you have downloaded is stored in **File Manager**, where you can view media files (videos, photos, music and others), rename files, install apps onto your phone, etc.

7.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable (USB tethering) or with up to eight devices at once by turning your phone into a portable Wi-Fi hotspot.

To turn on USB tethering or Portable Wi-Fi hotspot:

1 Touch on Quick setting bar to go to **Settings**.

2 Touch **More... > Tethering & portable hotspot**.

3 Mark the checkbox of **USB tethering** or turn on **Wi-Fi hotspot** to activate this function.

Sharing data may incur additional charges from your network operator. Extra fees may also be charged in roaming areas.

8 Find my location (GPS)

To turn on your phone's global positioning system (GPS) satellite receiver:

1 Touch on Quick setting bar to go to **Settings**.

2 Touch **Location services**.

3 Mark the checkbox of **Access to my location**, then **GPS satellites** will be automatically on.

Find your location by opening Maps:

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:21-Sec1:22 2013-12-31 13:08:44

Use your phone's GPS satellite receiver to determine your approximate location. The process of accessing the GPS satellite and setting your phone's location for the first time may take require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After initial set up, GPS will only require 20-40 seconds to identify your location. You can then start the process of finding the best route to another location.

9 Data backup

This phone enables you to back up your phone's settings and other app data to Google Servers, using your Google Account.

If you replace your phone, the settings and data you've backed up can be restored onto the new phone the first time you sign in with your Google Account.
To activate this function:

1 Touch on Quick setting bar to go to **Settings**.

2 Touch **Backup and reset > Back up my data**.

3 Mark the checkbox.

If you've turned on this function, a wide variety of settings and data are backed up, including your Wi-Fi passwords, bookmarks, a list of the apps you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings app. If you turn this option off, it will stop backing up your settings, and any existing backups are deleted from Google Servers.

10 Factory data reset

To activate a factory data reset:

1 Touch on Quick setting bar to go to **Settings**.

2 Touch **Backup and reset > Factory data reset**.

3 Touch **Reset phone > Erase everything**.

Reset phone will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and app settings, and any downloaded apps. Resetting the phone does not erase any system software updates you have downloaded. If you reset the phone in this way, you are prompted to re-enter the same kind of information as when you first started Android.

If you're unable to turn your phone on, there is another alternative to perform a factory data reset by pressing the **Volume up** key and the **Power** key at same time under power off mode until the screen lights up.

11 Apps

Your phone is preloaded with some Google apps, and more third-party apps can be downloaded onto it.

With the built-in apps, you can

- Communicate with friends.
- Exchange messages or emails with friends.
- Track your location, view traffic situations, search for locations and get navigation information to your destination.
- You can download more apps from the Play Store.

For more information about these apps, please check user manual online: vodafone.com/smart4mini.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:23-Sec1:24 2013-12-31 13:08:44

12 Update your phone's software

Using the FOTA (Firmware Over The Air) Upgrade tool you can update your phone's software.

To access **Software Updates**, open the Notification panel and touch and then , then touch **About phone > Software updates**. Or you can directly touch and access **Settings > About phone > Software updates**. Touch **Check for updates**, and the phone will search for the latest software. If you want to update the system, please touch **Download**, and when that's finished, touch **Install** to complete the upgrade. Now your phone will have the latest version of the software.

You should turn on data connection before searching for updates. Settings for auto-check intervals and reminders about upgrades are also available once you restart the phone.

If you have chosen auto-check, when the system discovers the new version, the icon will appear in the status bar. Touch the notification to access the **Software Updates** directly.

During FOTA downloading or updating, to avoid errors in locating the correct update packages, do not change your default storage location.

13 Product safety information

Pictograms and graphic symbols

Read the Safety Information section of this user guide on page 27

Do not use while re-fuelling

Do not use hand-held while driving

This device may produce a bright or flashing light

When using the phone, make sure it is kept at least 10 mm away from your head or body

Do not dispose of in a fire

Small parts may cause a choking hazard

Avoid contact with magnetic media

This device may produce a loud sound

Avoid extreme temperatures

Keep away from pacemakers and other personal medical devices

Avoid contact with liquid, keep dry

Switch off when instructed in hospitals and medical facilities

Do not try to disassemble

Switch off when instructed in aircraft and airports

Do not rely on this device for emergency communications

Switch off in explosive environments

Only use approved accessories

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:25-Sec1:26 2013-12-31 13:08:44

Product safety information

RF exposure

General statement on RF energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to ensure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.658 W/kg [1]. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.

As SAR is measured utilising the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Body worn operation

Important safety information regarding radiofrequency radiation (RF) exposure.

To ensure compliance with RF exposure guidelines the phone must be used with a minimum of 10 mm separation from the body.

Failure to observe these instructions could result in your RF exposure exceeding the relevant guideline limits.

"The highest SAR value for this mobile phone when tested for use at the body and compliance against the standard is 1.06 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure".

[1] The tests are carried out in accordance with IEC standard PT62209-1.

Limiting exposure to radio frequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organisation (WHO) provides the following advice:

Precautionary measures: present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using 'hands-free' devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page http://www.who.int/peh-emf WHO Fact sheet 193: June 2000.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:27-Sec1:28 2013-12-31 13:08:44

Regulatory information

The following approvals and notices apply in specific regions as noted.

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) causes distraction and can lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

Product handling

General statement on handling and use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories, only authorised personnel must do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum -10 and maximum +50 degrees Celsius.
- Please check local regulations for disposal of electronic products.

Do not carry your phone in your back pocket as it could break when you sit down.

Small children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:29-Sec1:30 2013-12-31 13:08:45

Your phone contains small parts with sharp edges that may cause an injury or which could become detached and create a choking hazard.

Demagnetisation

To avoid the risk of demagnetisation, do not allow electronic devices or magnetic media close to your phone for a prolonged time.

Electrostatic discharge (ESD)

Do not touch the SIM card's metal connectors.

Antenna

Do not touch the antenna unnecessarily.

Normal use position

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth or as you would a fixed line phone.

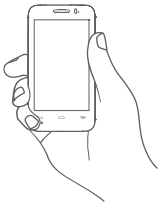

Air bags

Do not place a phone in the area over an air bag or in the air bag deployment area.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

This phone is capable of producing bright flashing lights.

Repetitive motion injuries

To minimise the risk of RSI, when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Make use of the special features in the handset which minimise the number of buttons which have to be pressed, such as message templates and predictive text.
- Take lots of breaks to stretch and relax.

Emergency calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

Loud noise

This phone is capable of producing loud noises which may damage your hearing. Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Use the recommended headphones only.

PROTECT YOUR HEARING

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Bright light

This phone is capable of producing flashes of light, do not use it too close to the eyes.

Phone heating

Your phone may become warm during charging and during normal use.

Electrical safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit the battery terminals.

Connection to a car

Seek professional advice when connecting a phone interface to the vehicle's electrical system.

Faulty and damaged products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel must service or repair the phone or its accessories.

If your phone or its accessories have been submerged in water, punctured, or subjected to a severe fall, do not use them until you have taken it to be checked at an authorised service centre.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:31-Sec1:32 2013-12-31 13:08:45

Battery handling & safety

Always switch the device off and disconnect the charger before removing the battery.

Only use the battery and charger supplied, or manufacturer approved replacements intended for use with your phone. Using other batteries and chargers could be dangerous.

Do not disassemble or short-circuit the battery. Accidental short-circuiting can occur if a metallic object such as a key, paper clip, or pen touches the terminals of the battery.

Improper battery use may result in a fire, explosion, or other hazard. If you believe the battery has been damaged, do not use it, take it to a service centre for testing.

Interference

General statement on interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing aids

People with hearing aids or other cochlear implants may experience interference noises when using wireless devices or when one is nearby. The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft, if your device offers a 'flight mode' this must be enabled prior to boarding an aircraft.

Interference in cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a handsfree kit with an external antenna is included in the installation.

Explosive environments

Petrol stations and explosive atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting caps and areas

Turn off your mobile phone or wireless device when in a blasting area or in areas posted with notifications requesting "two-way radios" or "electronic devices" are turned off to avoid interfering with blasting operations.

Your telephone is a transceiver that operates on GSM in triple-band (900/1800/1900 MHz) or UMTS in dual-band (900/2100 MHz).

CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: http://vodafone.com/smart4mini.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:33-Sec1:34 2013-12-31 13:08:45

Protection against theft [1]

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment.
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

[1] Contact your network operator for service availability.

Licences

microSD Logo is a trademark.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

Vodafone 785 Bluetooth QD ID B021282

The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.

Google, the Google logo, Android, the Android logo, Google Search ™, Google Maps™, Gmail ™, YouTube, Google Play Store, Google Latitude ™ and Hangouts ™ are trademarks of Google Inc.

The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License (the text will show when you touch and hold **Google legal** in **Settings > About phone > Legal information**) [1].

[1] This may not be available depending on your country.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:35-Sec1:36 2013-12-31 13:08:45

You have purchased a product which uses the open source (http://opensource.org/) programs mtd, msdosfs, netfilter/iptables and initrd in object code and other open source programs licensed under the GNU General Public License and Apache License.

We will provide you with a complete copy of the corresponding source codes upon request within a period of three years from the distribution of the product.

You may download the source codes from http://vodafone.com/smart4mini. The provision of the source code is free of charge from the internet.

Notice

The information in this manual is subject to change without notice.

Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied. Read the safety precautions and safety information carefully to ensure that you use this wireless device in a correct and safe manner.

TCT Mobile Limited Address:

Room 1910-12A, Tower 3, China HK City, 33 Canton Road, Tsimshatsui, Kowloon, Hong Kong

14 Telephone warranty

WARRANTY TERMS AND CONDITIONS

1. Vodafone undertakes the warranty of this Mobile Phone for a period of two (2) years from the date of Purchase by the original owner (not transferable) under normal use.
2. The Battery has a limited warranty for twelve (12) months, and Charger for twenty-four (24) months against manufacturing defects. Other accessories have a limited warranty for twenty-four (24) months against manufacturing defects.
3. This Warranty does not cover damage resulting from:
   a) Normal wear & tear of the equipment;
   b) Defects and damages due to the equipment being used other than its normal and customary manner;
   c) An unauthorised disassembly, repair, alteration or modification being carried out;
   d) Misuse, abuse, negligence or accident howsoever caused;
   e) Defects or damage arising from improper testing, operation, maintenance, installation, or any alteration or modification;
   f) Defects or damage due to spillage of food or liquids, corrosion, rust or the use of wrong voltage;
   g) Scratches or damage to plastic surfaces and all other externally exposed parts that are due to normal customer use;
4. The phone needing service/repair must be delivered at the user's cost.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:37-Sec1:38 2013-12-31 13:08:45

5. This warranty will be null and void in any of the following events:
   a) If the serial number or warranty seal on the equipment has been defaced or removed.
   b) If any term contained in this warranty has been altered or modified in any way without prior written consent of Vodafone.
6. The limited warranty extends only to customer who purchase the product in one of the countries (or areas) set forth at the end of this document. The limited warranty is only valid in Vodafone's intended country (or area) of sale of the Product.
7. If the product is returned to Vodafone after the expiration of the warranty period, Vodafone's normal service policies shall apply and the Consumer will be charged accordingly.
   a) Vodafone neither assumes for it any other obligation or liability beyond that which is expressly provided for in this limited warranty.
   b) All warranty information, product features and specifications are subject to change without notice.
8. THIS WARRANTY IS IN LIEU OF ANY AND OTHER WARRANTIES EXPRESSED OR IMPLIED, SPECIFICALLY INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VODAFONE ASSUMES NO LIABILITY FOR THE BREACH OF THE WARRANTY BEYOND CORRECTING THE BREACH IN THE MANNER DESCRIBED ABOVE. IN NO EVENT SHALL VODAFONE BE LIABLE FOR CONSEQUENCES.

IP4776_VF785_QG_Eng_GB_23_131230.indd Sec1:39 2013-12-31 13:08:45